



DISHWASHERS

DWA6314B2 SMEG BLACK FREESTANDING DISHWASHER







EAN 8017709278809

Size 598mmW x 600mmD x 848mmH

Capacity 14 Place settings

Finish Black
Display LED lights

Programs 5 + 5 Quick Programs

End of cycle indicator On display, with acoustic signal

Baskets 3 Levels

Wash system Orbital Wash System

Water softener No

Temperatures 38°, 45°, 50°, 65°, 70°C

Features Fully adjustable upper and middle baskets

Quicktime programs

Flexizone Flexitabs

rlexitabs

Self Balancing hinges

Water connection Hot or cold Water Connection (60°C Max)

Timer 3-6-9-12 hours, with automatic soak

Filtration Stainless steel 5 stage filter

Drying Natural condenser drying

Safety Child safety system (door lock)

Active Acquastop

 Noise
 47dBA

 Water usage
 9.9 Litres

 Power
 1800W 220-240V

220-240\ 50 Hz 10A



ORBITAL WASH SYSTEM

Smeg's orbital wash system has a major spray arm and satellite spray arm which spins ten times for every single revolution of the major spray arm to ensure water is thoroughly distributed in-between every piece in the wash for exceptional results.





QUICK⁵ WASH OPTIONS

One button automatic adjustment of wash and rinse duration, frequency and temperature to reduce program times by up to 100 minutes across five programs.



CHILD SAFETY LOCK

A must for families with young children, Smeg has developed an electronic system for locking the dishwasher controls. Children can press the buttons without interrupting the wash program. It's also convenient for parents, deactivating with a simple two button combination.



ACTIVE ACQUASTOP

Active Acquastop electronically determines when and how much water to let into the dishwasher, automatically controlling the water feed at the tap. It's a major advantage of a Smeg dishwasher, because there is no water in the hose and therefore no building water pressure, where problems most often occur. Active Acquastop is one of five distinctive water safety and flood prevention features in all Smeg dishwashers.



DELAY TIMER

Every Smeg dishwasher has a delay start option, which allows you to operate the machine during periods of off-peak or lower energy tariffs. The combination of excellent water and energy savings combined with time of use can ensure much lower running costs.





DISHWASHERS

Programs

























Functions









